

Medium Chassis Hail Guard PART NO. HGK-4

INSTALLATION INSTRUCTIONS

INTRODUCTION

The accessory condenser hail guard doors are designed to protect the coils of the Argus line of Condensing units from harsh weather conditions and debris. See

TABLE 1 for accessory package usage, and see **TABLE 2** for accessory package contents. One accessory kit is required for each unit.

Check each item for shipping damage. If any damage is found, file a claim with the shipping agent immediately. If any item is missing or if any part does not assemble properly, notify your Tecumseh representative.

TABLE 1: HAIL GUARD DOORS ACCESSORY PACKAGE USAGE		
CHASSIS SIZE	PACKAGE NUMBER	NUMBER OF ACCESSORY KITS REQUIRED
MEDIUM	HGK-4	1

TABLE 2: ACCESSORY PACKAGE HGK-4 CONTENTS			
ITEM NO.	PART NO.	DESCRIPTION	QTY
1	HGE-2	HAIL GUARD – MED CHASSIS	1
2	330-10145	1/4-14 3/4" HEX HEAD TYPE SELF TAPPING SCREWS	6
3	132-10041	INSTRUCTIONS	1

Please see reverse side for hail guard mounting instructions.

SAFETY CONSIDERATIONS

Installing, starting up, and servicing air-conditioning equipment can be hazardous due to system pressures, electrical components, and equipment locations.

Only trained, qualified installers and service technicians should install, startup, and service this equipment.

When installing this accessory, observe precautions in the literature and on any labels attached to the equipment, and all other safety precautions that may apply.

- ▶ Follow all safety codes.
- ▶ Wear safety glasses and work gloves.
- ▶ Use care in handling and installing this accessory.

WARNING

To avoid the possibility of electrical shock, open and tag all disconnects before installing this equipment. Be aware that there may be more than one disconnect.

CAUTION

Only trained, qualified installers and service technicians should install, start up, and service this equipment. Untrained personnel can perform basic maintenance functions such as cleaning coils. All other operations should be performed by trained service personnel. When working on the equipment, observe precautions in the literature and on tags, stickers, and labels attached to the equipment.

Medium Chassis Hail Guard

MOUNTING INSTRUCTIONS

1. Make sure the unit is switched off. Lockout and disconnect all the power connections.
2. Remove the hail guard unit from the carton and position against the unit, as shown in Figure 1 & 2.
3. Mark the top screw mounting locations from the Hail guard assembly, as shown in Figure 3.
4. Drill pilot holes (0.2" or less) at the marked locations. Make sure the internal components are untouched. Pilot holes are optional as the unit comes with self-tapping sheet metal screws.
5. Mount the Hail guard on to the unit using the provided self-tapping screws – Figure 4.
6. Make sure the unit is secure before turning on the power supply.

